
This set includes a foot holder and three feet:

 
- 1) Closed-toe foot (shown with foot holder)
- ② Open-toe foot③ Clear view foot

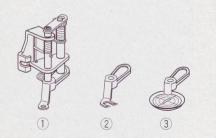

Attaching the foot holder:

Remove the foot holder and attach the free motion guilting foot holder.


Make sure that the needle enters the center of the hole in the foot.



Changing the foot:

Raise the presser bar and turn the round nut (A) to bring the foot to the lowest position.

 
Remove the setscrew (B) and remove the foot. Attach the desired foot and secure it with the setscrew.



Adjusting the height of the foot:

Lower the presser bar. (On embroidery machines, turn the hand wheel to bring the presser bar to the lowest position.)

 Adjust the height of the foot by turning the round nut (A) until the bottom of the foot barely touches the top of the quilt layers.



Machine settings:

Stitch: Straight Stitch

(center needle position only)

Thread tension: Auto or 2-5 Feed dog: Lowered

NOTE: The clear view foot can be used for zigzag stitches.

Sew at medium speed while guiding the quilt layers with your hands.

Move the quilt layers 3 mm (1/8") or less per stitch.

CAUTION:

Do not select any pattern other than the straight stitch with center needle position when the closed-toe foot or open-toe foot is attached. Do not turn the handwheel when the foot is raised.

NOTE: Use the optional Bobbin Holder for Free Quilting with this foot set.