


How to remove and refit the needle threader

First you need to remove the circlip

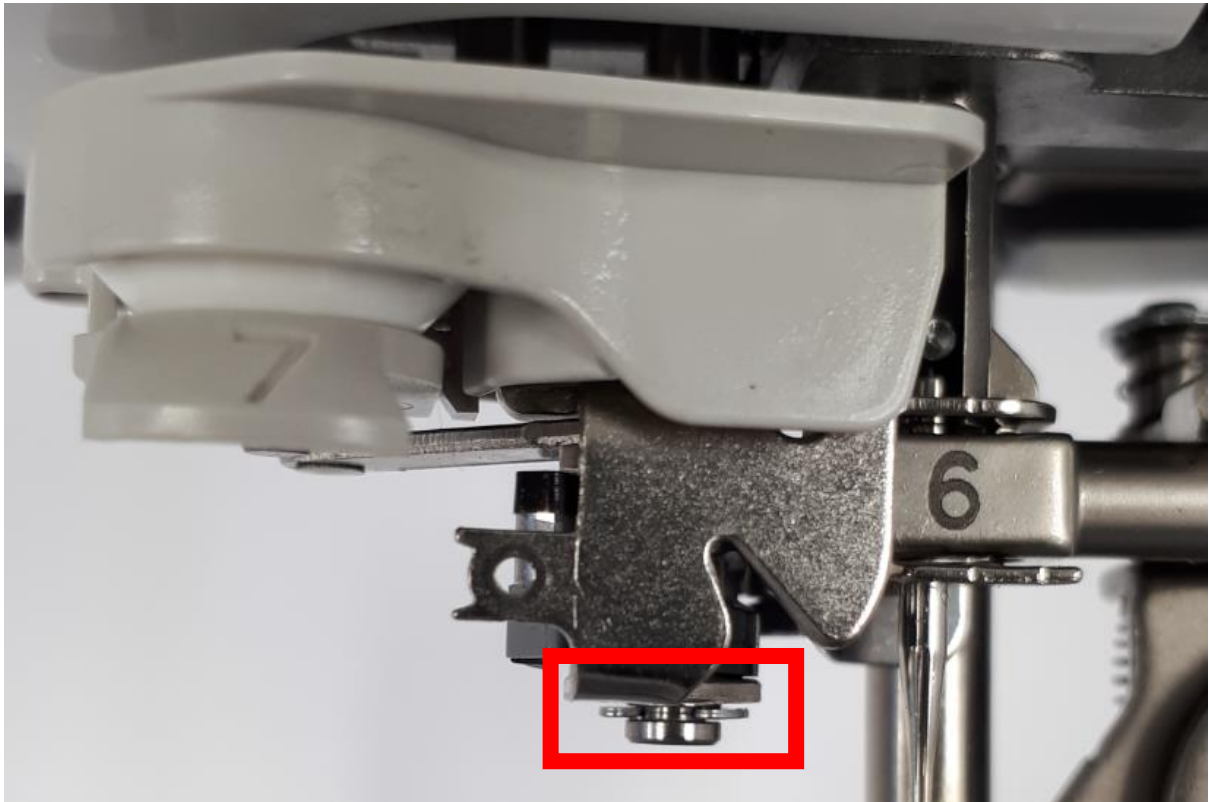






Then pull the lever down slightly and put a little low adhesive tape above it to stop it from going back up. This will help with the next bit.



Now using a thin flat blade screwdriver you need to push down on the needle threader at the top as shown in the picture below to remove the needle threader from the shaft.

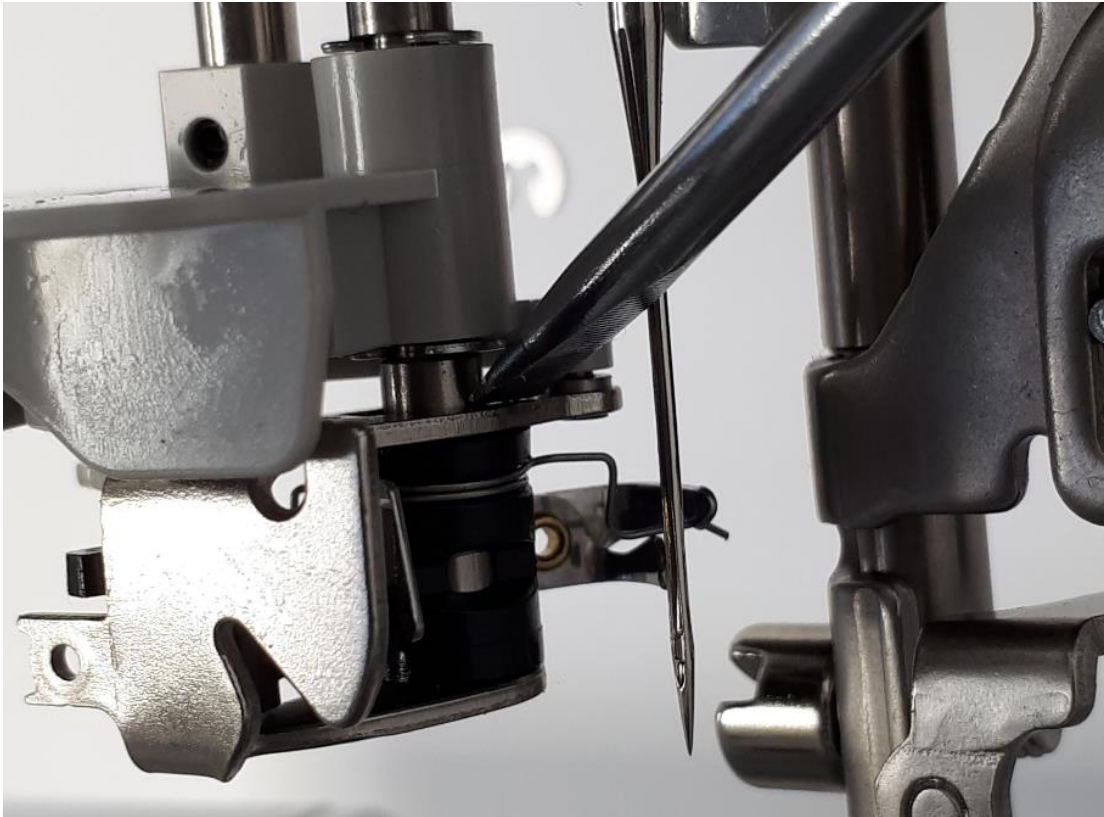

Now get a new threader and put it together as below.

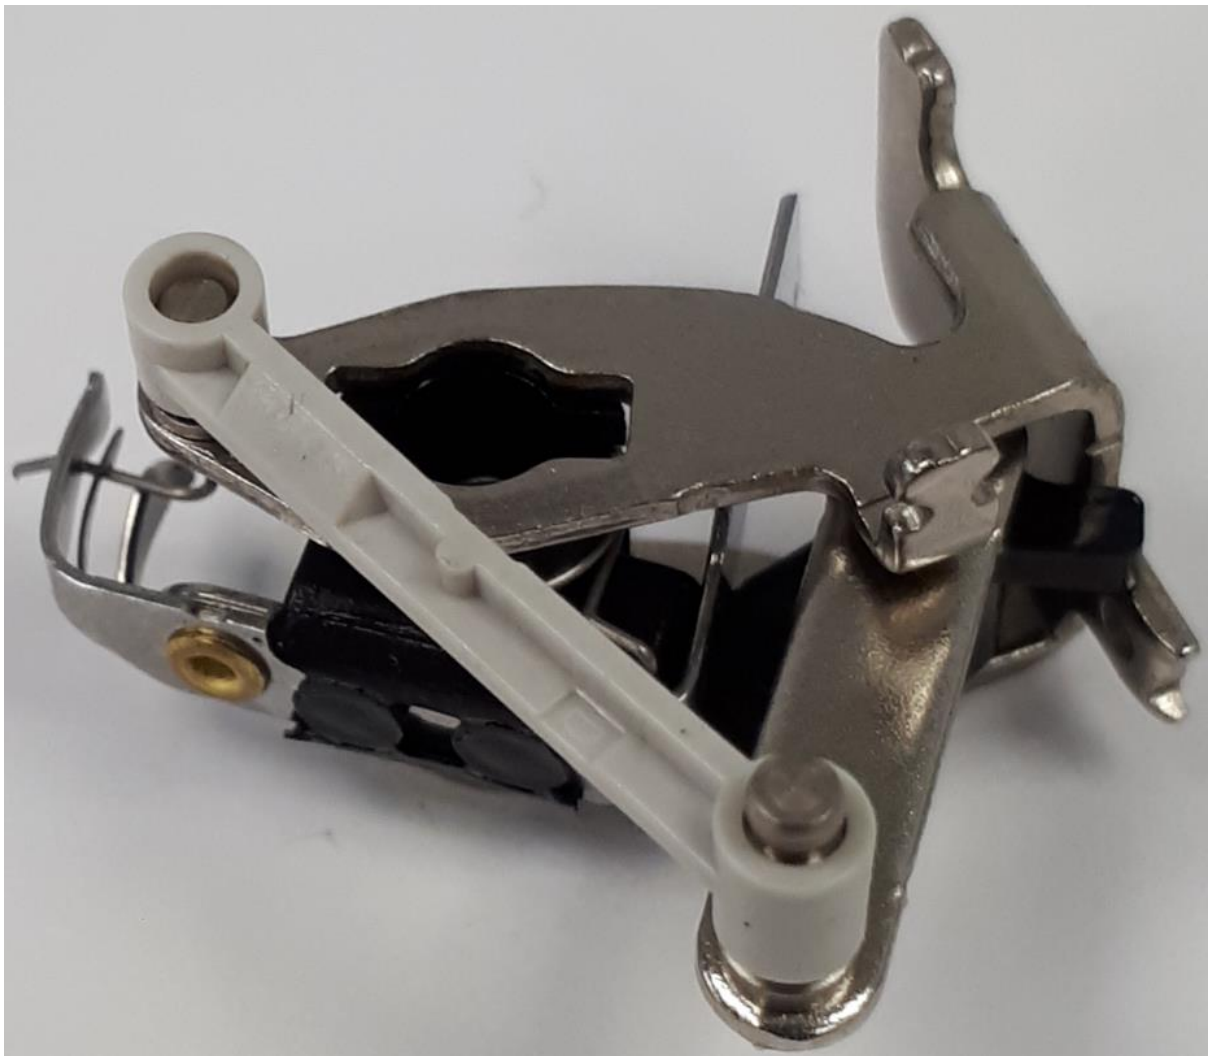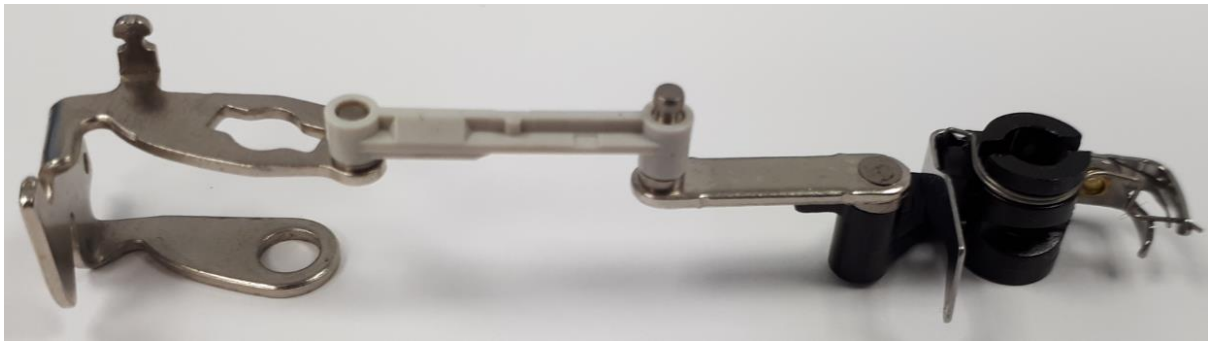




Now you just need to put it back on in reverse. So once you have the needle threader assembled you need to line up the holes in the needle threader to the lugs on the shaft then push up.



You must also make sure the guide pin at the back of the needle threader goes into the guide rail.

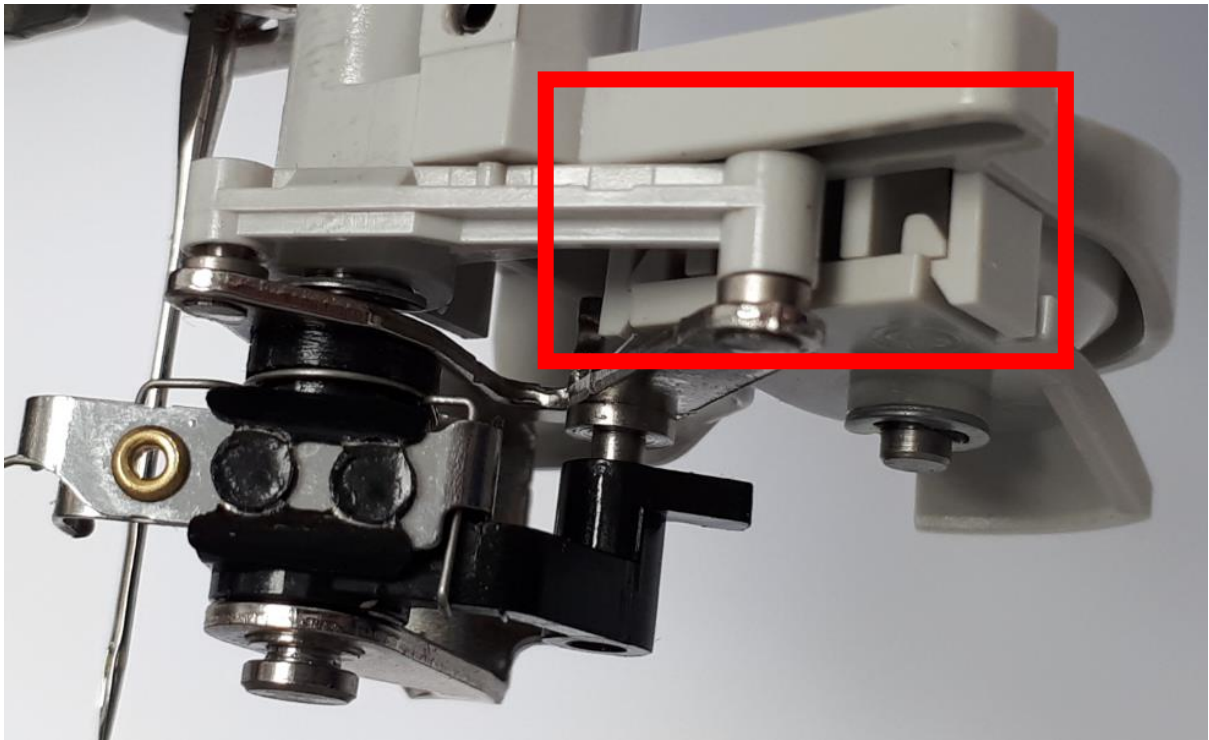

Then finally attach the circlip.

